

Mbsm.pro , Testeur de câble , camera (bnc connector) , USB, Rg45 , Rg11, Port 1394 , Produit tester, par mbsmgroup

Category: Tester ok

written by www.mbsm.pro | 19 February 2018

Mbsm.pro , Testeur de câble , camera (bnc connecter) , USB, Rg45 , Rg11, Port 1394 , Produit tester, par mbsmgroup

Legend:

- Power
- Connected
- Short
- Low Battery
- No Connection
- Cross

	RJ-11	1394	USB	BNC
RJ-45				
RJ-11				
1394				
USB				
BNC				

RJ-45		●	●	●	●	●	●	●	●
RJ-11		●	●	●	●	●	●	●	
1394	●	●	●	●	●	●	●		
USB	●	●	●	●	●				
BNC		●	●						

5 in 1 Cable Tester

TO TEST JUMPER CABLES:

Plug cable into appropriate jack on the Master Unit and Remote
Press TEST button and observe LEDs on Master Unit to find faults

TO TEST INSTALLED CABLES:

Plug cable into appropriate jack on the Master Unit. Locate other
end of cable and plug into appropriate jack on Remote
Press TEST button and observe LEDs on Master Unit to find faults

The 5 in 1 checks for Cable Continuity,
Miswiring, Opens, Shorts, Crossover and Grounding.

Maximum Cable Length = 600 Feet (RJ-45/RJ-11/BNC)

Refer to manual for complete instructions.

CAUTION: Do not connect to a live circuit.

Do not test more than one cable simultaneously

CE













Cable Tester

RJ-11	1394	USB	BNC					
Power		Low Battery						
Connected		No Connection						
Short		Cross						
S/G	1	2	3	4	5	6	7	8
RJ-45								
RJ-11								
1394								
USB								
BNC								

Remote Unit

5 in 1 Cable Tester