

ORIENT Inverter AC Error Codes

Category: air conditioner

written by www.mbsm.pro | 9 January 2026



Model : Inverter AC

Error Code	Faults
E1	Room Temperature sensor faulty
E2	Outdoor coil temperature sensor fault
E3	Indoor coil temperature sensor fault
E4	Indoor fan motor or DC Motor feedback fault
E5	Indoor & Outdoor communication error
E6	Sliding door fault
E8	Display board and main control board communication error
E9	Humidity sensor failure
EA	Indoor fan zero crossing detection fault
Eb	Indoor EEPROM fault
F0	Outdoor DC Fan motor fault
F1	IPM modular fault
F2	PFC modular fault
F3	Compressor operation fault
F4	Exhaust temperature sensor fault
F5	Compressor top cover protection
F6	Outdoor ambient temperature sensor fault
F7	Over / under voltage protection
F8	Outdoor modular communication fault
F9	Outdoor EEPROM fault
FA	Suction temperature sensor fault
Fb	Indoor DC motor fault (Floor standing)
FC	Four way valve switching fault
Fd	Outdoor fan zero crossing detection fault
P2	High voltage protection
P3	Lack of fluid protection
P4	Outdoor coil prevent overload protection
P5	Exhaust protection
P6	Protection from high temperature
P7	Anti freezing protection

Discover comprehensive troubleshooting for ORIENT inverter AC systems. This complete error code guide covers E-series, F-series, P-series, and L-series fault codes with detailed solutions for sensor issues, communication failures, compressor problems, and electrical protection systems affecting your cooling performance.

www.mbsm.pro, GREE , Mini Split , Air Conditioner ,Error Codes E6 , How To Fix

Category: Solutions,Tester ok
written by Jamila | 9 January 2026



The error E6 comes from the engine, it is the electronic engine card if it is an inverter range.

Communication error E6 Between Outside and inside