

Mbsm.pro , Testeur de câble , camera (bnc connector) , USB, Rg45 , Rg11, Port 1394 , Produit tester, par mbsmgroup

written by Lilianne | 19 February 2018

Mbsm.pro , Testeur de câble , camera (bnc connecter) , USB,
Rg45 , Rg11, Port 1394 , Produit tester, par mbsmgroup

5 in 1 Cable Tester

TO TEST JUMPER CABLES:

Plug cable into appropriate jack on the Master Unit and Remote
Press TEST button and observe LEDs on Master Unit to find faults

TO TEST INSTALLED CABLES:

Plug cable into appropriate jack on the Master Unit. Locate other
end of cable and plug into appropriate jack on Remote.
Press TEST button and observe LEDs on Master Unit to find faults

The 5 in 1 checks for Cable Continuity,
Miswiring, Opens, Shorts, Crossover and Grounding.

Maximum Cable Length = 600 Feet (RJ-45/RJ-11/BNC)

Refer to manual for complete instructions.

CAUTION: Do not connect to a live circuit.
Do not test more than one cable simultaneously





Cable Tester

Power	Connected	No Connection	Low Battery				
Short	Cross						
SIG 1	2	3	4	5	6	7	8
RJ-45							
RJ-11							
1394							
USB							
BNC							

5 in 1 Cable Tester
Remote Unit







Remote Unit

5 in 1 Cable Tester

Cable Tester

	RJ-45	RJ-11	1394	USB	BNC
Power	●	●	●	●	●
Connected	●	●	●	●	●
Short	●	●	●	●	●
Low Battery	●	●	●	●	●
Cross	●	●	●	●	●
No Connection	●	●	●	●	●
SIG 1	●	●	●	●	●
2	●	●	●	●	●
3	●	●	●	●	●
4	●	●	●	●	●
5	●	●	●	●	●
6	●	●	●	●	●
7	●	●	●	●	●
8	●	●	●	●	●

