

Mbsm.pro , Testeur de câble , camera (bnc connector) , USB, Rg45 , Rg11, Port 1394 , Produit tester, par mbsmgroup

Category: Tester ok

written by www.mbsm.pro | 19 February 2018

Mbsm.pro , Testeur de câble , camera (bnc connecter) , USB, Rg45 , Rg11, Port 1394 , Produit tester, par mbsmgroup

Cable Tester

RJ-45

RJ-11

1394

USB

BNC

Power

Low Battery

Connected

No Connection

Short

Cross

S/G 1 2 3 4 5 6 7 8

RJ-45		●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
RJ-11		●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
1394	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
USB	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
BNC		●	●	●	●	●	●	●	●	●	●	●	●	●	●	●

5 in 1 Cable Tester

TO TEST JUMPER CABLES:

Plug cable into appropriate jack on the Master Unit and Remote
Press TEST button and observe LEDs on Master Unit to find faults

TO TEST INSTALLED CABLES:

Plug cable into appropriate jack on the Master Unit. Locate other
end of cable and plug into appropriate jack on Remote
Press TEST button and observe LEDs on Master Unit to find faults

The 5 in 1 checks for Cable Continuity,
Miswiring, Opens, Shorts, Crossover and Grounding.

Maximum Cable Length = 600 Feet (RJ-45/RJ-11/BNC)

Refer to manual for complete instructions.

CAUTION: Do not connect to a live circuit.

Do not test more than one cable simultaneously

CE





Cable Tester

Pair	1	2	3	4	5	6	7	8
RL-45	•	•	•	•	•	•	•	•
RL-11	•	•	•	•	•	•	•	•
1384	•	•	•	•	•	•	•	•
USB	•	•	•	•	•	•	•	•
BNC	•	•	•	•	•	•	•	•

Remote Unit

5 in 1 Cable Tester







