

Mbsm.pro , Testeur de câble , camera (bnc connector) , USB, Rg45 , Rg11, Port 1394 , Produit tester, par mbsmgroup

Category: Tester ok

written by www.mbsm.pro | 19 February 2018

Mbsm.pro , Testeur de câble , camera (bnc connecter) , USB, Rg45 , Rg11, Port 1394 , Produit tester, par mbsmgroup

RJ-45

RJ-11

1394

USB

BNC

Power

Low Battery

Connected

No Connection

Short

Cross

S/G 1 2 3 4 5 6 7 8

RJ-45		●	●	●	●	●	●	●	●
RJ-11		●	●	●	●	●	●	●	
1394	●	●	●	●	●	●	●		
USB	●	●	●	●	●				
BNC		●	●	●					

5 in 1 Cable Tester

TO TEST JUMPER CABLES:

Plug cable into appropriate jack on the Master Unit and Remote Press TEST button and observe LEDs on Master Unit to find faults

TO TEST INSTALLED CABLES:

Plug cable into appropriate jack on the Master Unit. Locate other end of cable and plug into appropriate jack on Remote Press TEST button and observe LEDs on Master Unit to find faults

The 5 in 1 checks for Cable Continuity, Miswiring, Opens, Shorts, Crossover and Grounding

Maximum Cable Length = 600 Feet (RJ-45/RJ-11/BNC)

Refer to manual for complete instructions

CAUTION: Do not connect to a live circuit.

Do not test more than one cable simultaneously

CE





Cable Tester

	1	2	3	4	5	6	7	8
RJ-45	●	●	●	●	●	●	●	●
RJ-11	●	●	●	●	●	●	●	●
1584	●	●	●	●	●	●	●	●
USB	●	●	●	●	●	●	●	●
BNC	●	●	●	●	●	●	●	●

Remote Unit

5 in 1 Cable Tester









Cable Tester

RJ-45	RJ-11	1394	USB	BNC				
Power	Connected	Low Battery	No Connection					
Short								
S/G	1	2	3	4	5	6	7	8

Remote Unit

5 in 1 Cable Tester