


Mbsm.pro , Testeur de câble , camera
(bnc connector) , USB, Rg45 , Rg11,
Port 1394 , Produit tester, par
mbsmgroup

Category: Tester ok

written by www.mbsm.pro | 19 February 2018

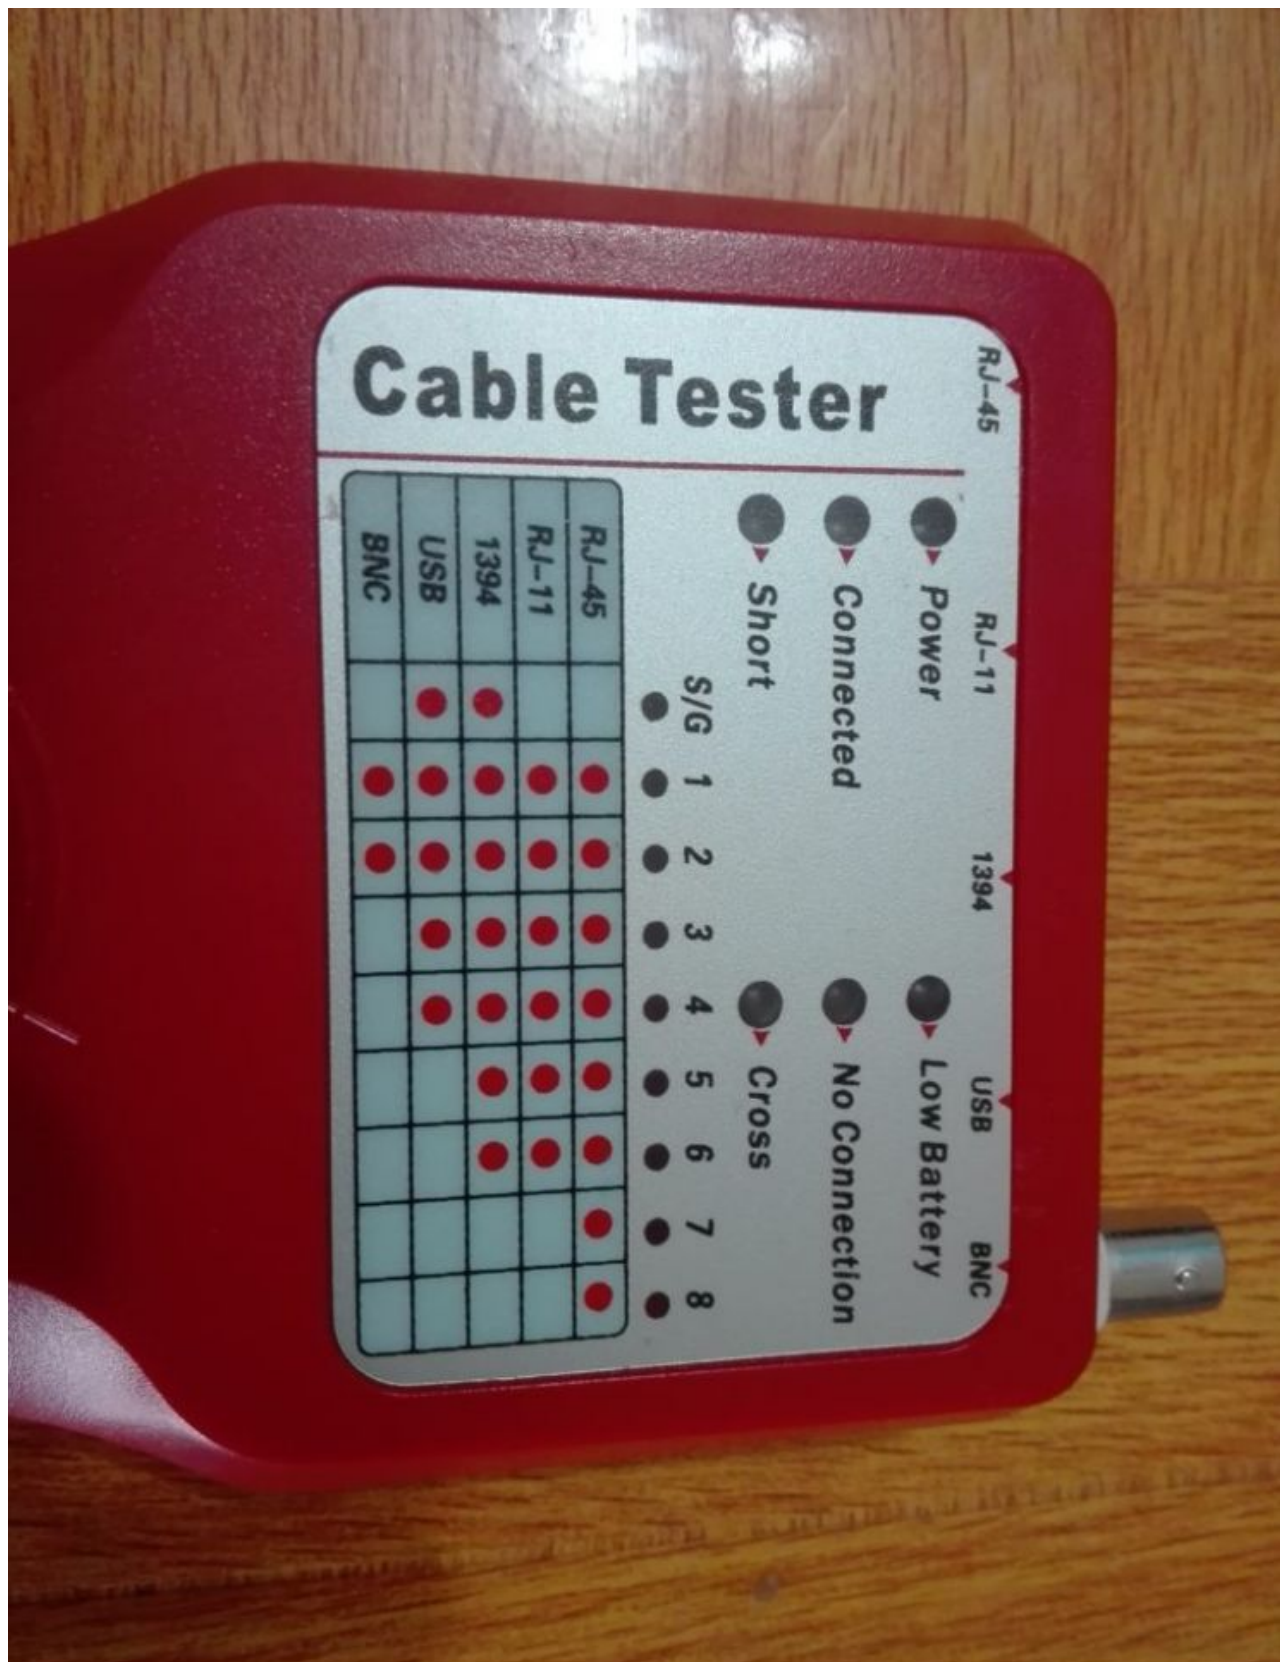

Picture5 Mbsm Dot Pro : www.mbsm.pro

Mbsm.pro , Testeur de câble , camera (bnc connecter) , USB, Rg45 , Rg11, Port 1394 , Produit tester, par mbsmgroup

	RJ-45	RJ-11	1394	USB	BNC
Power					
Connected					
Short					
Cross					

RJ-45		●	●	●	●	●	●	●	●
RJ-11		●	●	●	●	●	●	●	
1394	●	●	●	●	●	●	●		
USB	●	●	●	●	●				
BNC		●	●	●					

5 in 1 Cable Tester

TO TEST JUMPER CABLES:

Plug cable into appropriate jack on the Master Unit and Remote Press TEST button and observe LEDs on Master Unit to find faults

TO TEST INSTALLED CABLES:

Plug cable into appropriate jack on the Master Unit. Locate other end of cable and plug into appropriate jack on Remote Press TEST button and observe LEDs on Master Unit to find faults

The 5 in 1 checks for Cable Continuity, Miswiring, Opens, Shorts, Crossover and Grounding

Maximum Cable Length = 600 Feet (RJ-45/RJ-11/BNC)

Refer to manual for complete instructions

CAUTION: Do not connect to a live circuit.

Do not test more than one cable simultaneously

CE













Cable Tester

RL-45 RL-11 1394 USB BNC

Power Connected Low Battery No Connection

Short Cross

S/G	1	2	3	4	5	6	7	8
RL-45								
RL-11								
1394								
USB								
BNC								

5 in 1 Cable Tester

Remote Unit