


Mbsm.pro , Testeur de câble , camera
(bnc connector) , USB, Rg45 , Rg11,
Port 1394 , Produit tester, par
mbsmgroup

Category: Tester ok

written by www.mbsm.pro | 19 February 2018

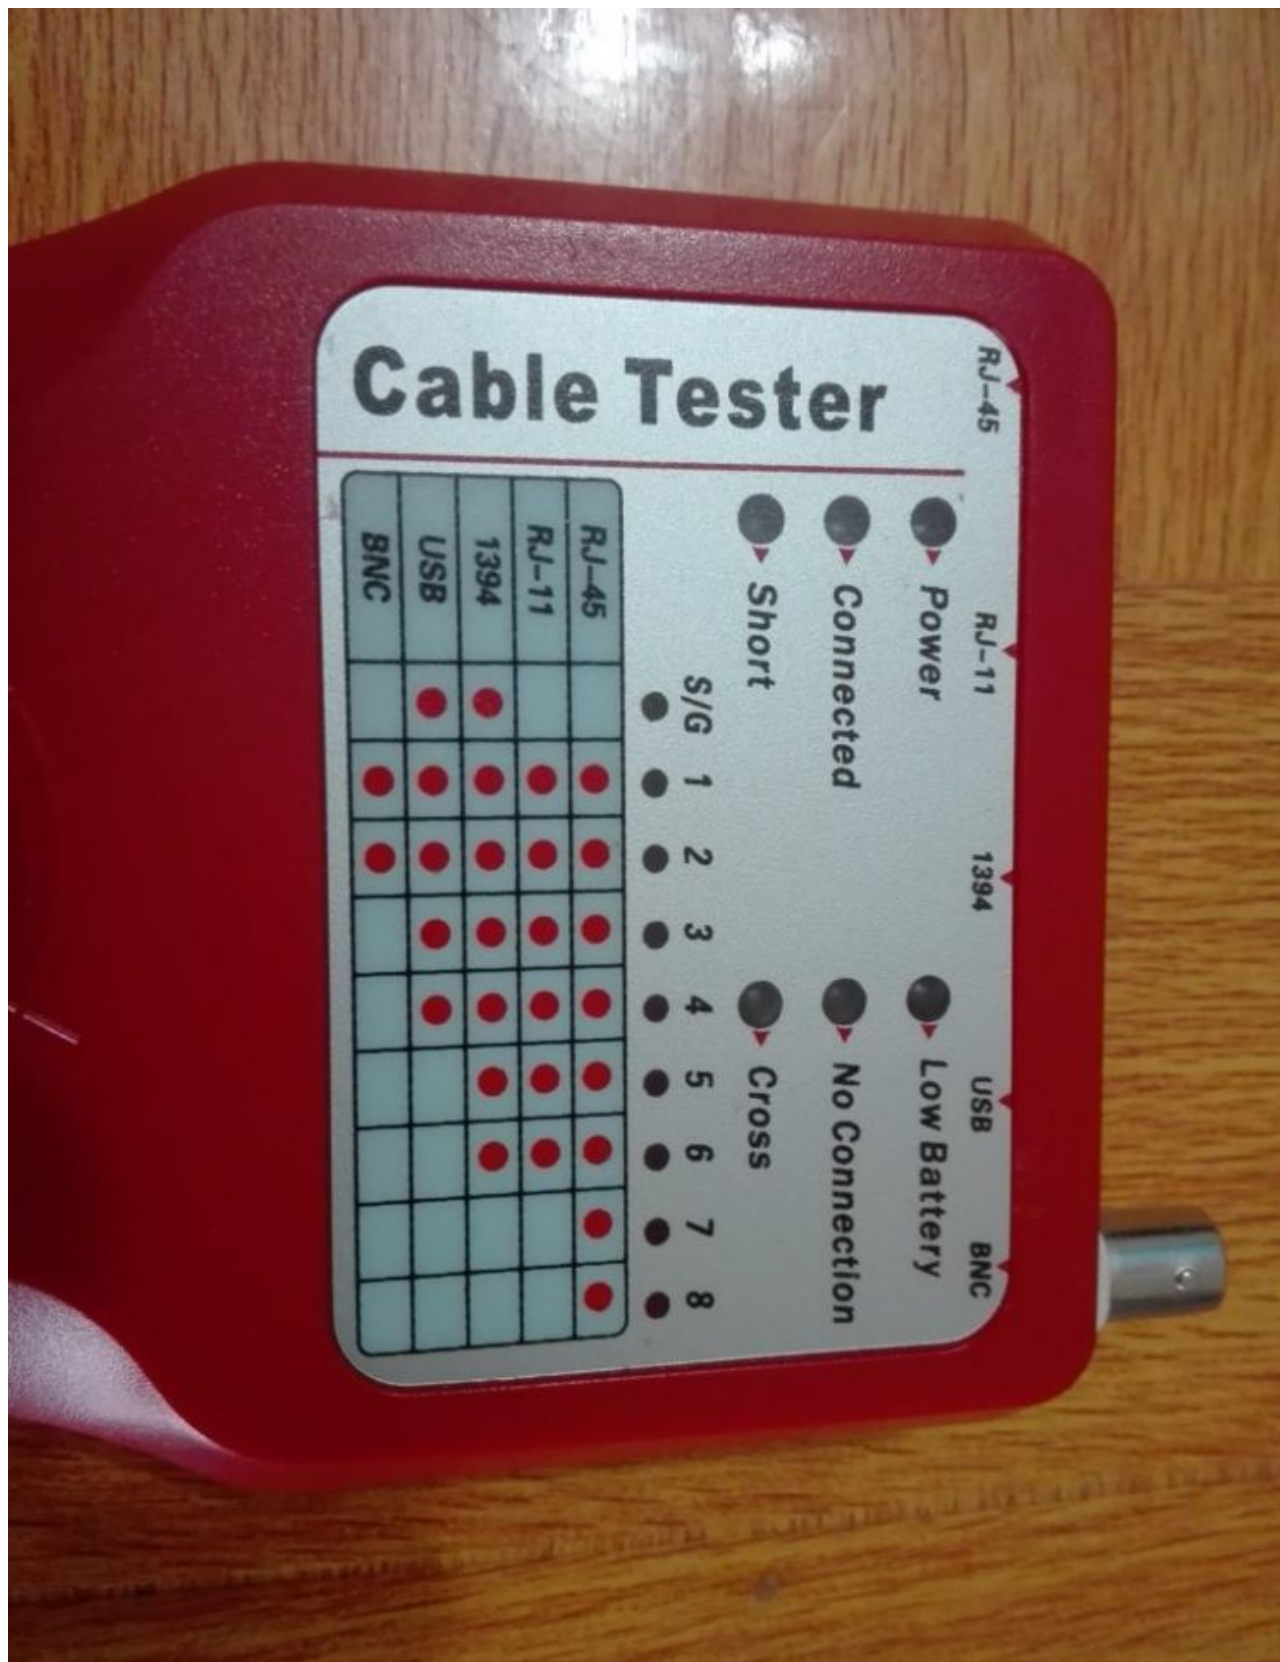

Picture5 Mbsm Dot Pro : www.mbsm.pro

Mbsm.pro , Testeur de câble , camera (bnc connecter) , USB, Rg45 , Rg11, Port 1394 , Produit tester, par mbsmgroup

Cable Tester

RJ-45

RJ-11

1394

USB

BNC

● Power

● Low Battery

● Connected

● No Connection

● Short

● Cross

S/G 1 2 3 4 5 6 7 8

RJ-45		●	●	●	●	●	●	●	●
RJ-11		●	●	●	●	●	●	●	●
1394	●	●	●	●	●	●	●	●	●
USB	●	●	●	●	●	●	●	●	●
BNC		●	●	●	●	●	●	●	●

5 in 1 Cable Tester

TO TEST JUMPER CABLES:

Plug cable into appropriate jack on the Master Unit and Remote
Press TEST button and observe LEDs on Master Unit to find faults

TO TEST INSTALLED CABLES:

Plug cable into appropriate jack on the Master Unit. Locate other
end of cable and plug into appropriate jack on Remote
Press TEST button and observe LEDs on Master Unit to find faults

The 5 in 1 checks for Cable Continuity,
Miswiring, Opens, Shorts, Crossover and Grounding.

Maximum Cable Length = 600 Feet (RJ-45/RJ-11/BNC)

Refer to manual for complete instructions.

CAUTION: Do not connect to a live circuit.

Do not test more than one cable simultaneously

CE





Cable Tester

RL-45	RL-11	1384	USB	BNC
Connected	Power	Low Battery		
Short				
SIG 1	2	3	4	5
6	7	8		
Cross				
No Connection				

Remote Unit

5 in 1 Cable Tester









Cable Tester

RJ-11	1394	USB	BNC					
Power		Low Battery						
Connected		No Connection						
Short		Cross						
S/G	1	2	3	4	5	6	7	8
RJ-45								
RJ-11								
1394								
USB								
BNC								

Remote Unit

5 in 1 Cable Tester