


# Mbsm.pro , Testeur de câble , camera (bnc connector) , USB, Rg45 , Rg11, Port 1394 , Produit tester, par mbsmgroup

Category: Tester ok
written by www.mbsm.pro | 19 February 2018

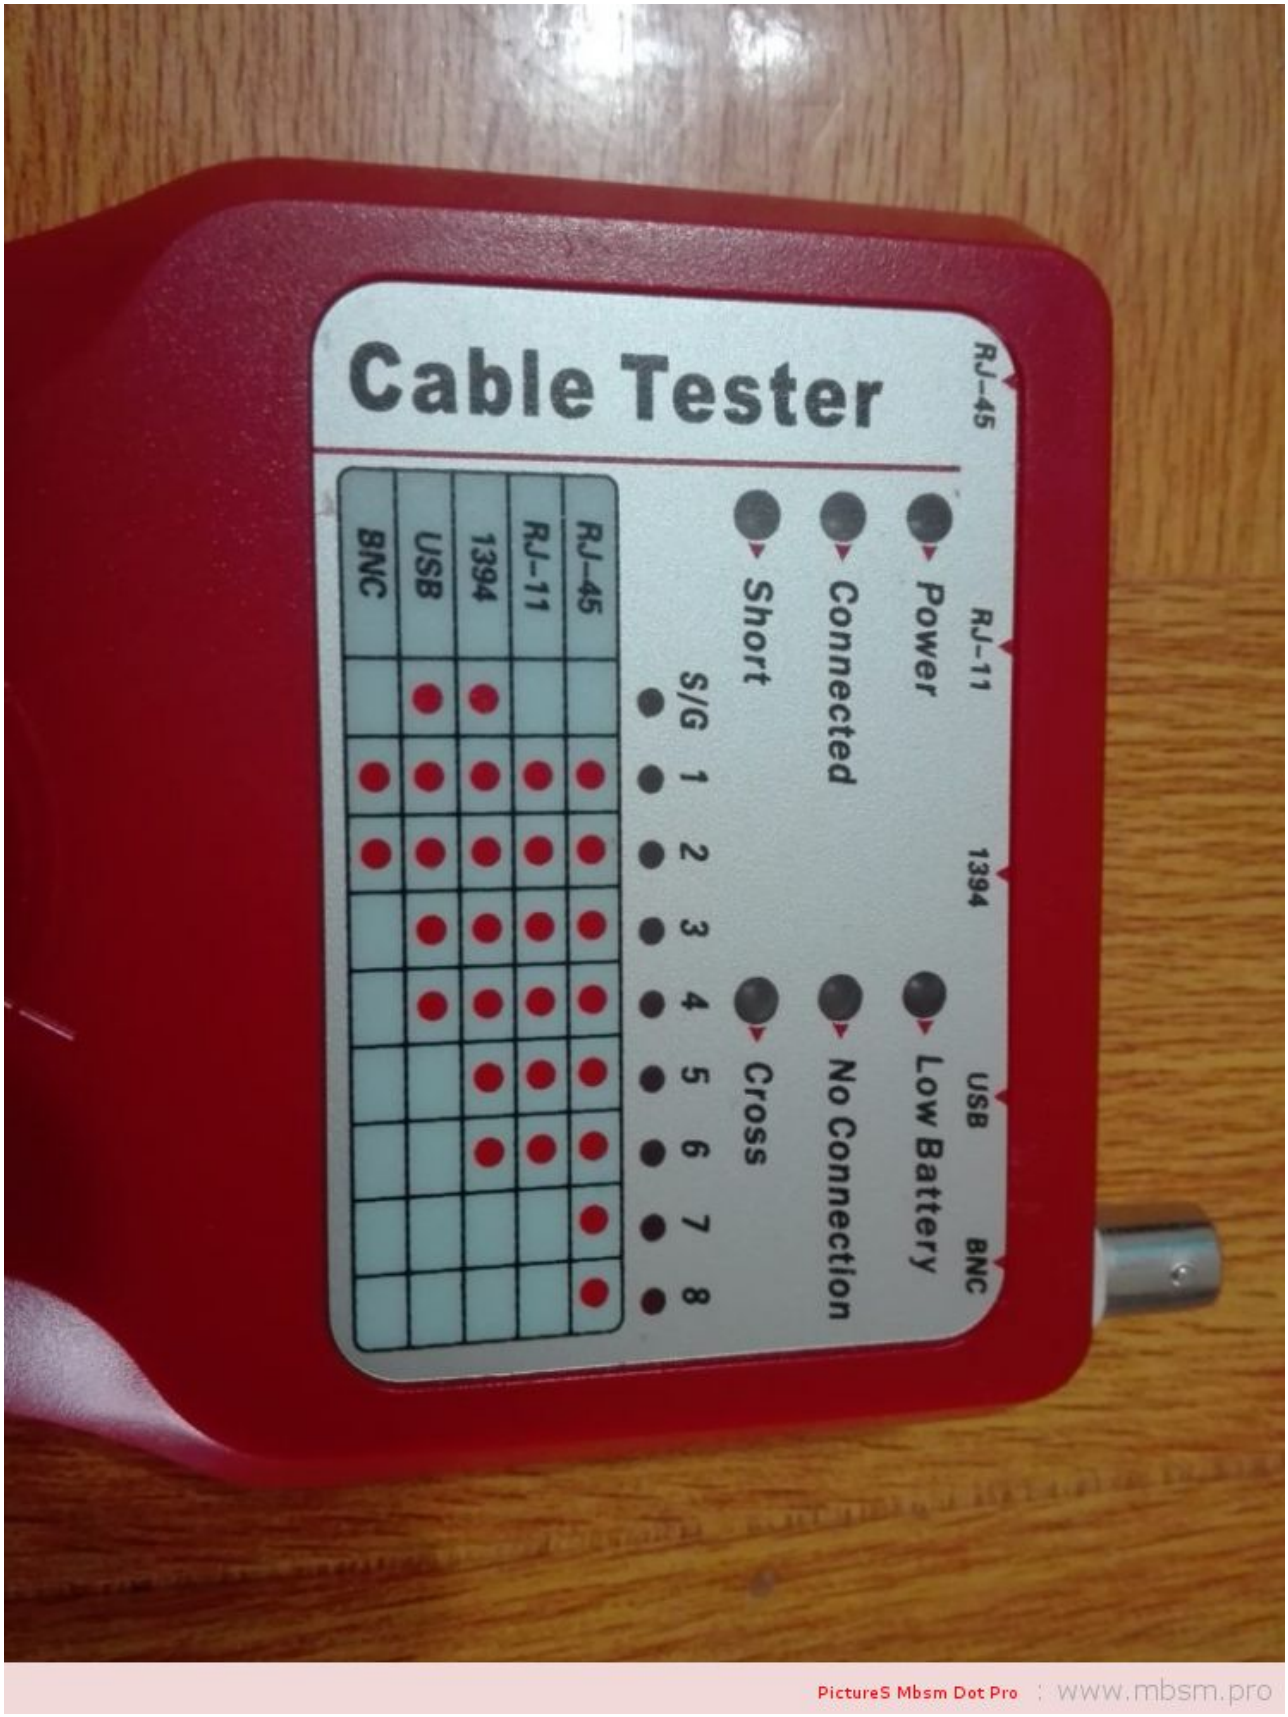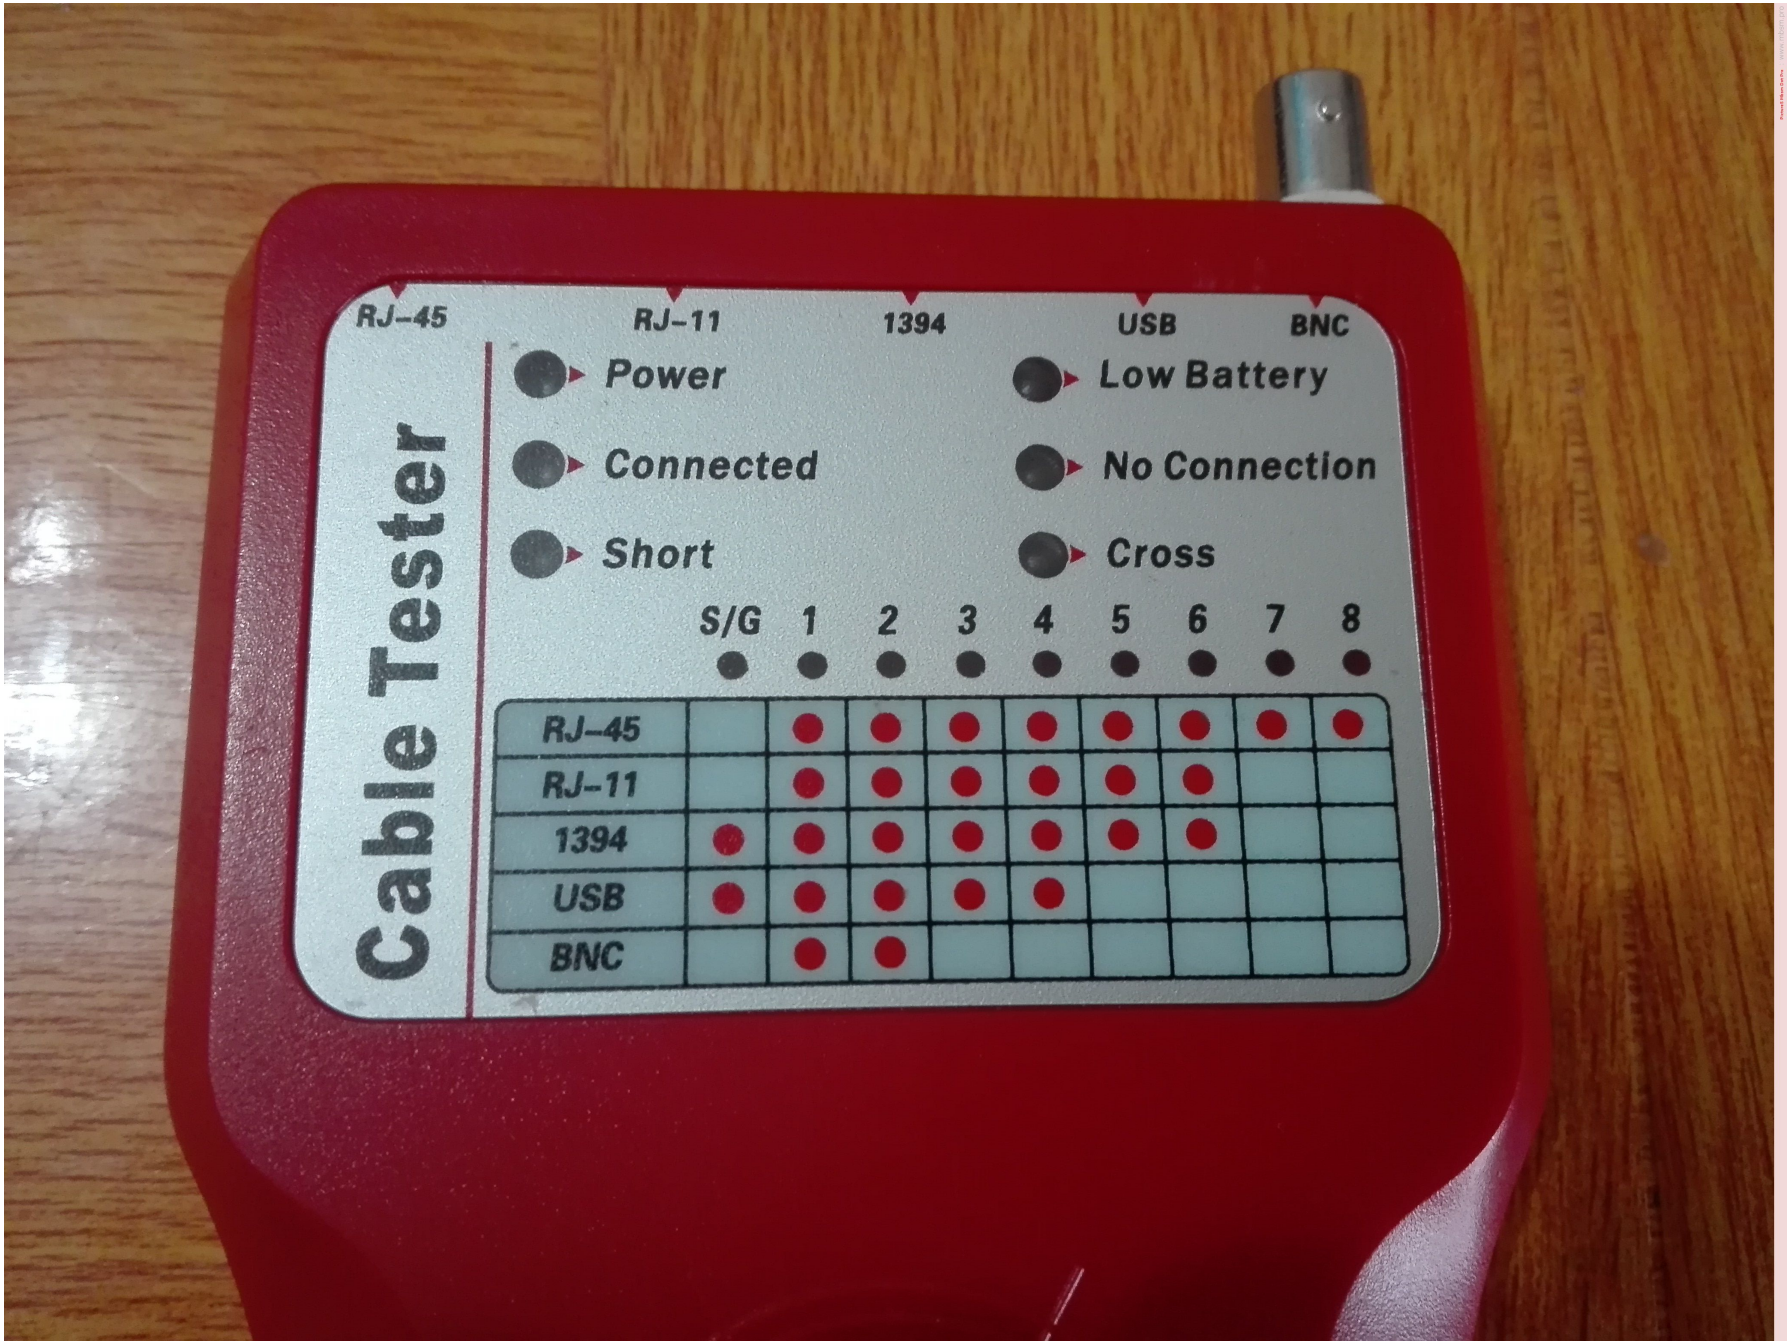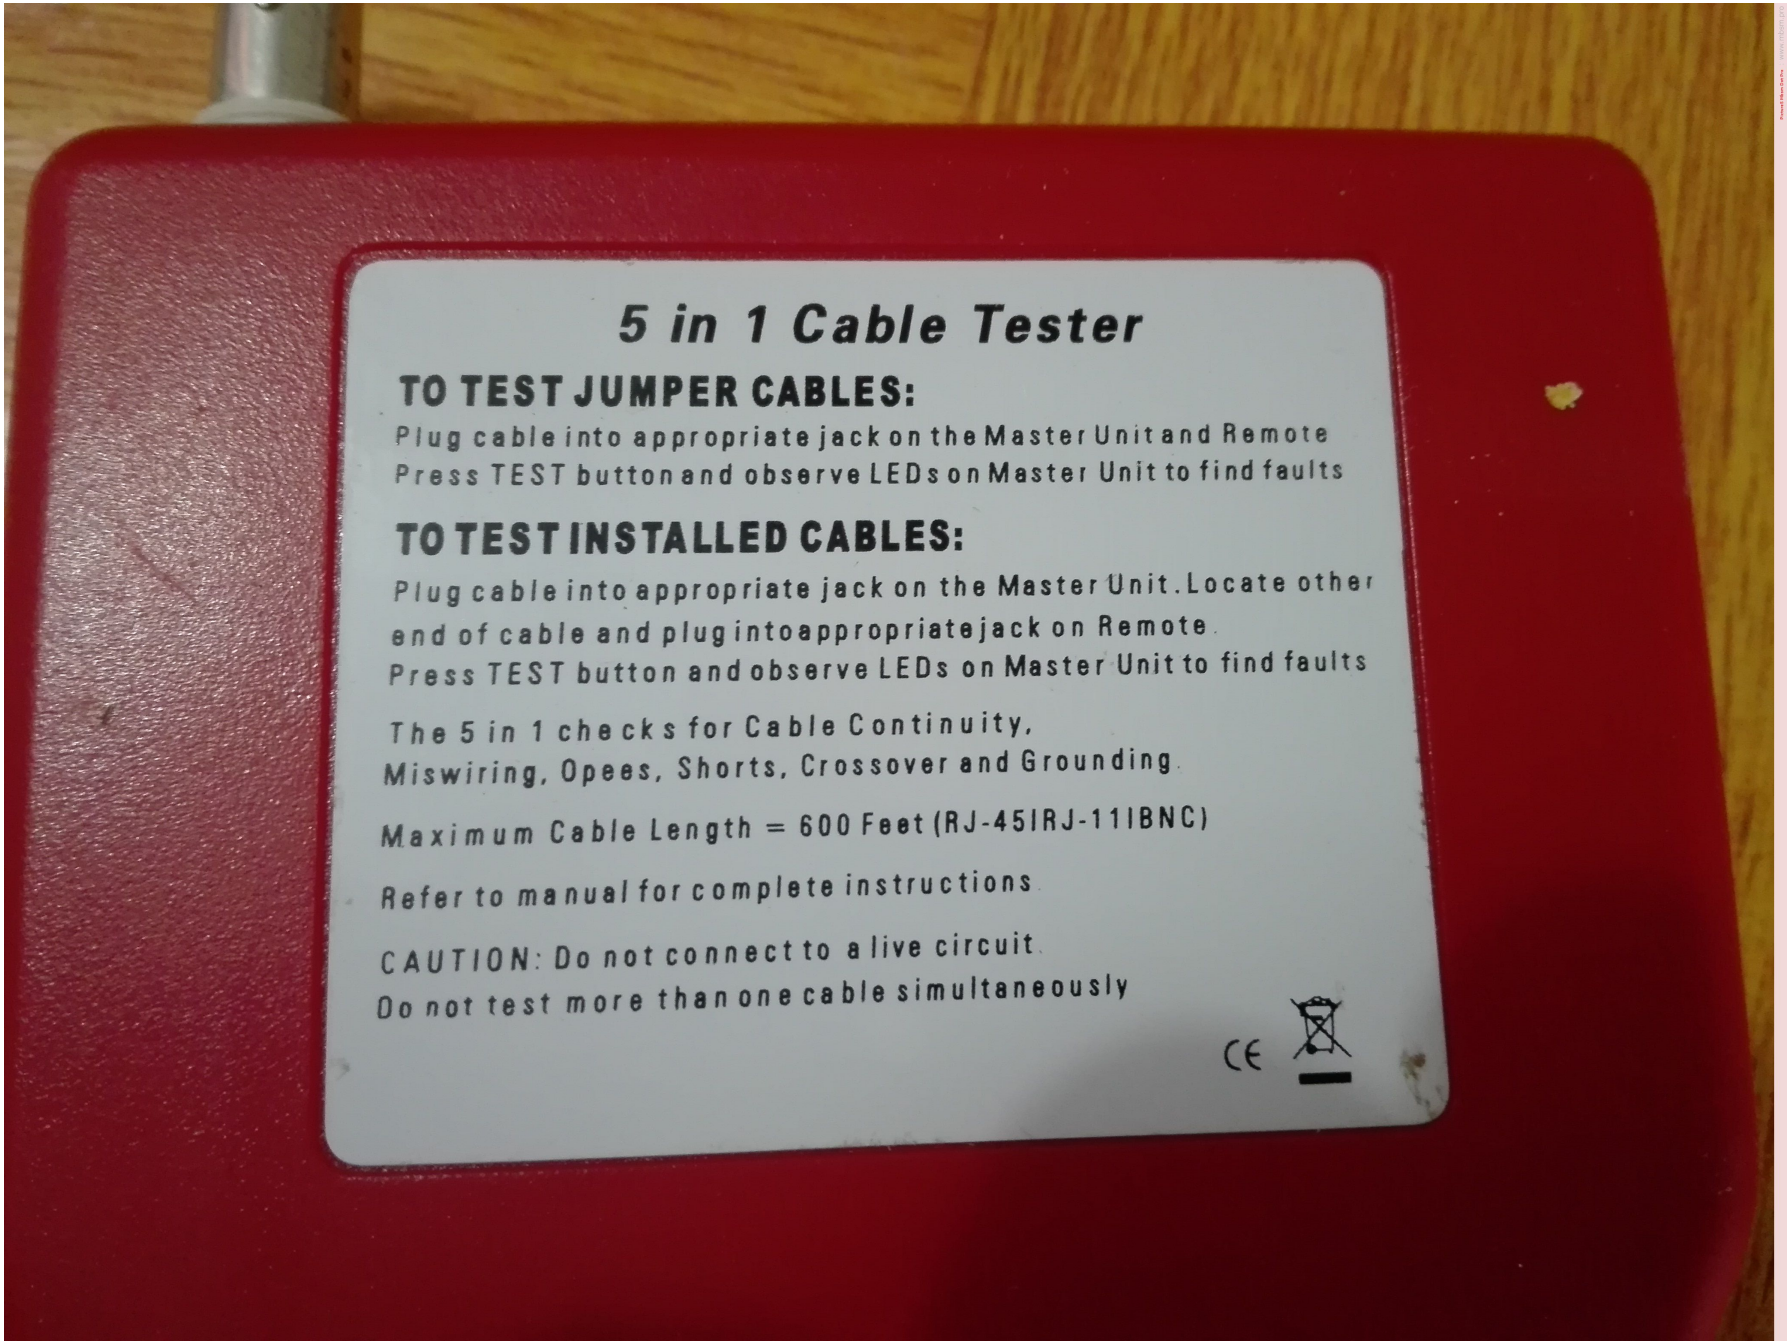


Mbsm.pro , Testeur de câble , camera (bnc connecter) , USB, Rg45 , Rg11, Port 1394 , Produit tester, par mbsmgroup


RJ-45
RJ-11
1394
USB
BNC
Cable Tester
Power
Low Battery
Connected
No Connection
Short
Cross
S/G 1 2 3 4 5 6 7 8
RJ-45
RJ-11
1394
USB
BNC


5 in 1 Cable Tester
TO TEST JUMPER CABLES:
Plug cable into appropriate jack on the Master Unit and Remote
Press TEST button and observe LEDs on Master Unit to find faults
TO TEST INSTALLED CABLES:
Plug cable into appropriate jack on the Master Unit. Locate other
end of cable and plug into appropriate jack on Remote.
Press TEST button and observe LEDs on Master Unit to find faults
The 5 in 1 checks for Cable Continuity,
Miswiring, Opees, Shorts, Crossover and Grounding.
Maximum Cable Length = 600 Feet (RJ-45IRJ-11IBNC)
Refer to manual for complete instructions.
CAUTION: Do not connect to a live circuit.
Do not test more than one cable simultaneously
CE

Cable Tester
RJ-45
RJ-11
1394
USB
BNC
Power
Connected
Short
Low Battery
No Connection
Cross
S/G
1
2
3
4
5
6
7
8
RJ-45
RJ-11
1394
USB
BNC
5 in 1 Cable Tester
Remote Unit






Cable Tester
RJ-45
RJ-11
1394
USB
BNC
Power
Connected
Short
Low Battery
No Connection
Cross
S/G
1
2
3
4
5
6
7
8
RJ-45
RJ-11
1394
USB
BNC
5 in 1 Cable Tester
Remote Unit


Cable Tester
RJ-45
RJ-11
1394
USB
BNC
Power
Connected
Short
Low Battery
No Connection
Cross
S/G 1 2 3 4 5 6 7 8
RJ-45
RJ-11
1394
USB
BNC
5 in 1 Cable Tester
Remote Unit