

# Types of Electrical Motors, RSIR, CSIR, RSCR, CSR, PTC, NTC, LST, HST, MBP, HBP, LBP

Category: compressor, Files

written by [www.mbsm.pro](http://www.mbsm.pro) | 8 April 2021

Types of Electrical Motors

**RSIR (Resistance Start-Induction Run)**

LST motor. No capacitors. Auxiliary winding is disconnected after start up. Standard energy efficiency.

**CSIR (Capacitor Start-Induction Run)**

HST motor. With starting capacitor.

Auxiliary winding is disconnected after start up. Standard efficiency.

**RSCR (Resistance Start-Capacitor Run)**

LST motor. With running capacitor. Auxiliary winding remains connected after start up.

Used for high efficiency in small capacity compressors (particularly in household refrigeration)

**CSR (Capacitor Start and Run)**

HST motor. Two capacitors (starting and running).

Auxiliary winding remains connected after start up.

Used for high efficiency in small compressors and for size reduced size motors in compressors with comparatively large displacements

## Types of Electrical Motors

### **RSIR (Resistance Start-Induction Run)**

LST motor. No capacitors. Auxiliary winding is disconnected after start up. Standard energy efficiency.

### **CSIR (Capacitor Start-Induction Run)**

HST motor. With starting capacitor.

Auxiliary winding is disconnected after start up. Standard efficiency.

### **RSCR (Resistance Start-Capacitor Run)**

LST motor. With running capacitor. Auxiliary winding remains connected after start up.

Used for high efficiency in small capacity compressors (particularly in household refrigeration)

### **CSR (Capacitor Start and Run)**

HST motor. Two capacitors (starting and running).

Auxiliary winding remains connected after start up.

Used for high efficiency in small compressors and for size reduced size motors in compressors with comparatively large displacements.



Private Picture Copyright : [WWW.MBSM.PRO](http://WWW.MBSM.PRO)

Type of starting device

Current relay – (electromechanical). RSIR/CSIR motors and CSR low/medium-power motors with NTC (the NTC is connected in series with the starting capacitor and the main purpose is to reduce the current peaks in the relay contacts)

Potential relay – (electromechanical). CSR high-power motors.

PTC – (Positive Temperature Coefficient), the resistance increases



with the temperature. Device only with RSIR or RSCR motors in the (Small L, B), L and P ranges.

NTC – (Negative Temperature Coefficient), the resistance decreases with the temperature. Used in some CSR in order to reduce dimensions and components.


### Type of starting device

**Current relay** – (electromechanical). RSIR/CSIR motors and CSR low/medium-power motors with NTC (the NTC is connected in series with the starting capacitor and the main purpose is to reduce the current peaks in the relay contacts)

**Potential relay** – (electromechanical). CSR high-power motors.

**PTC** – (Positive Temperature Coefficient), the resistance increases with the temperature. Device only with RSIR or RSCR motors in the (Small L, B), L and P ranges.

**NTC** – (Negative Temperature Coefficient), the resistance decreases with the temperature. Used in some CSR in order to reduce dimensions and components.

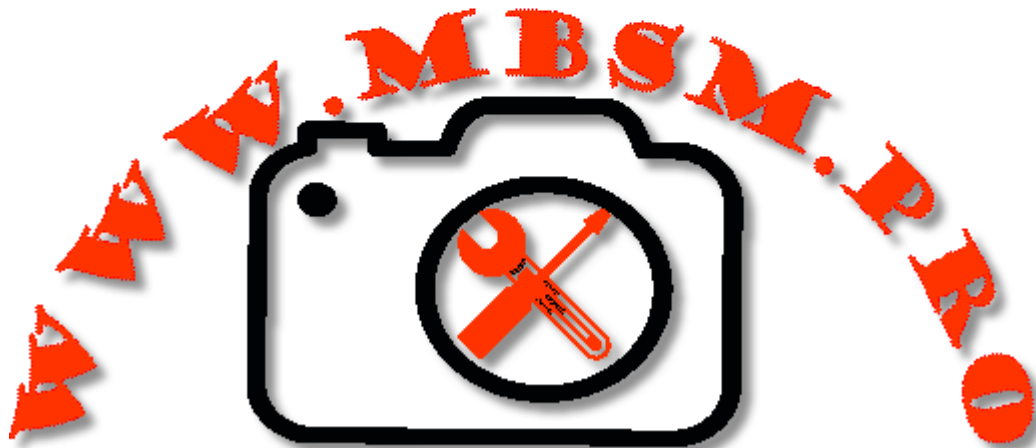

Private Picture Copyright : [WWW.MBSM.PRO](http://WWW.MBSM.PRO)

### Type of torque

LST – Low Starting Torque – Systems with capillary tube or balanced pressures at start up.


HST – High Starting Torque – Systems with expansion valve or capillary tube, with unbalanced pressures at start up.



## Type of torque


**LST** – Low Starting Torque – Systems with capillary tube or balanced pressures at start up.

**HST** – High Starting Torque – Systems with expansion valve or capillary tube, with unbalanced pressures at start up.

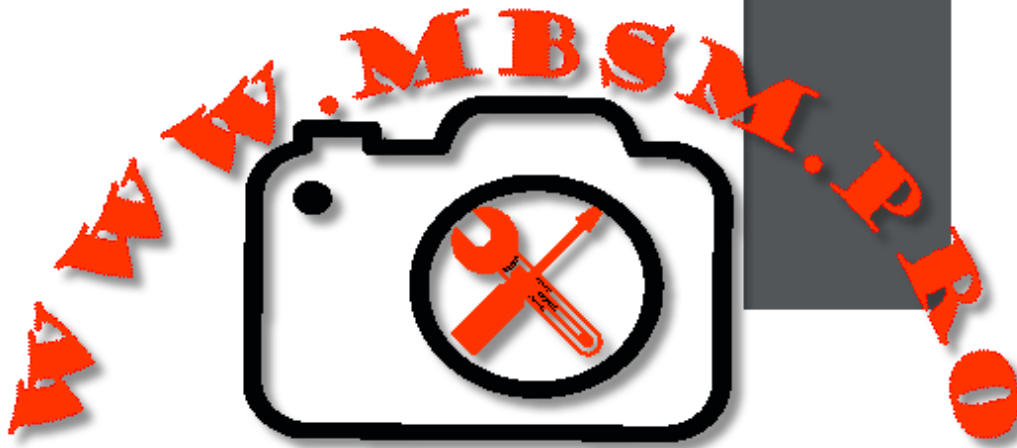

Private Picture Copyright : [WWW.MBSM.PRO](http://WWW.MBSM.PRO)


Secop HBP compressors: evaporation pressures

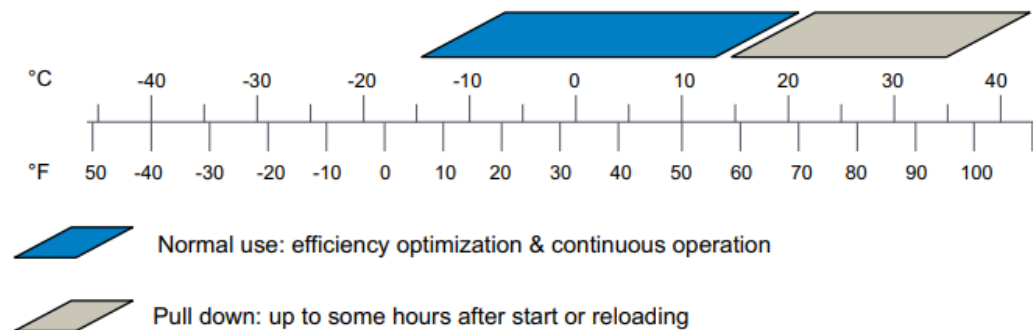




Private Picture Copyright : [WWW.MBSM.PRO](http://WWW.MBSM.PRO)

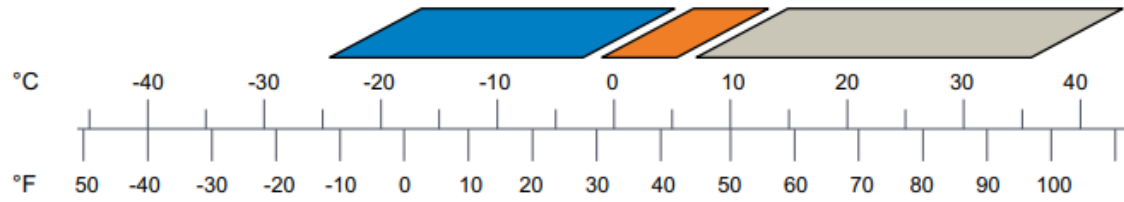

# Secop MBP compressors: evaporation pressures







-  Normal use: efficiency optimization & continuous operation
-  High load: continuous operation
-  Pull down: up to some hours after start or reloading



Private Picture Copyright : [WWW.MBSM.PRO](http://WWW.MBSM.PRO)
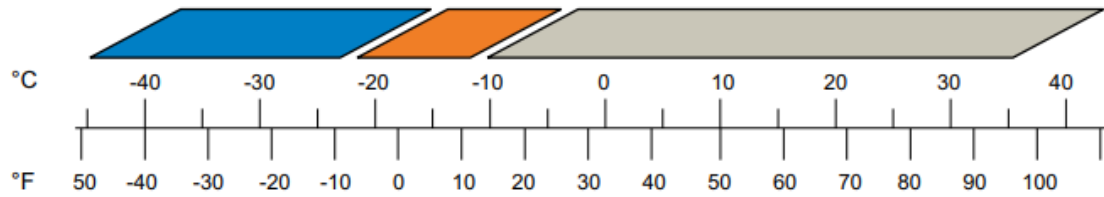
# Secop LBP compressors: evaporation pressures



-  Normal use: efficiency optimization & continuous operation
-  High load: continuous operation
-  Pull down: short time operation (<60min.) after start or defrost



Private Picture Copyright : [WWW.MBSM.PRO](http://WWW.MBSM.PRO)